




Installing The SWISSTRAX Tile Floor.

Begin at the top left of the space to be covered. Set the first tile down, taking care to place the "smooth" edges left and top. Place the next tile to the right of that, "smooth" edges left and top, interlocking the pegs under the second tile with the hooks on the edge of the first tile. A tap with the palm of your hand should be sufficient to seat the tile tightly. Continue working towards the right until the first row is complete. Go back to the left side to begin the second row. Continue to work right and down. Be sure to check alignment along the top and the left side as you progress. Add edging and corners to finish the installation.

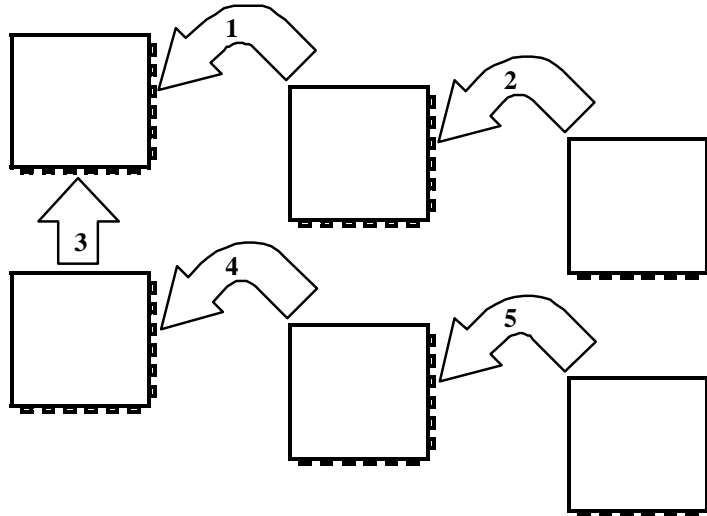

Taking Up The SWISSTRAX Tile Floor

We recommend the floor be taken up in sections, to make future installation easier and quicker. The size of the section should be similar to your storage area dimensions. First remove the corners and edging. To remove the tiles start at the bottom right of the floor area. Grasp one or two end tiles firmly with both hands, then flick up to unseat those rows. Separate the tiles at the desired length. Stack the separated sections, in order, starting with the bottom right section and ending with the top left. In that way you'll be able to do your next installation in sections, again starting at the top left.

